

# Wear Layer & Durability

All Clever Choice products come with a wear layer that, combined with the overall construction, protects from general wear and tear over the lifetime of the product.

All products respond differently depending on the environment in which they've been installed, but a general guide has been provided opposite.

|                   | Laminate | Resilient | Timber                          |
|-------------------|----------|-----------|---------------------------------|
| Residential       | AC3      | 0.3mm     | 7 Layers<br>UV Cured<br>Lacquer |
| Medium Commercial | AC4      | 0.4mm     |                                 |
| Heavy Commercial  | AC5      | 0.5mm     |                                 |

### Laminate




Extremely strong at first but can become more brittle over a long period of time.

### Resilient

Great durability but easier to indent and scratch than the laminate solutions.

### Timber

Not known for high levels of durability but can be sanded and recoated to make it last a lifetime.

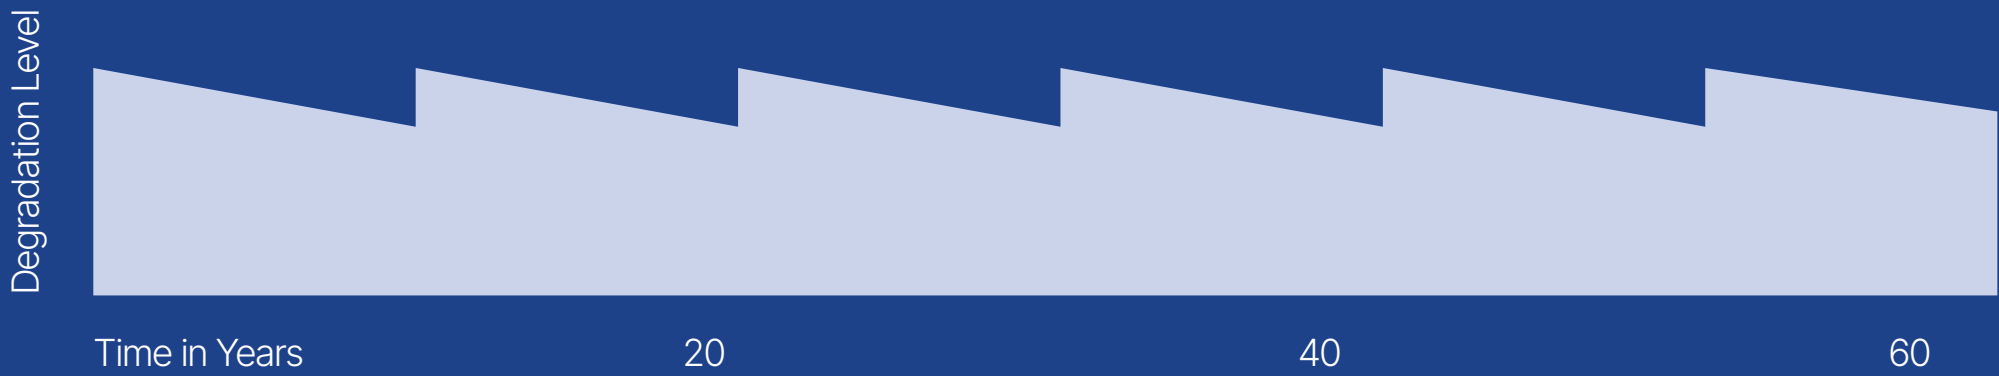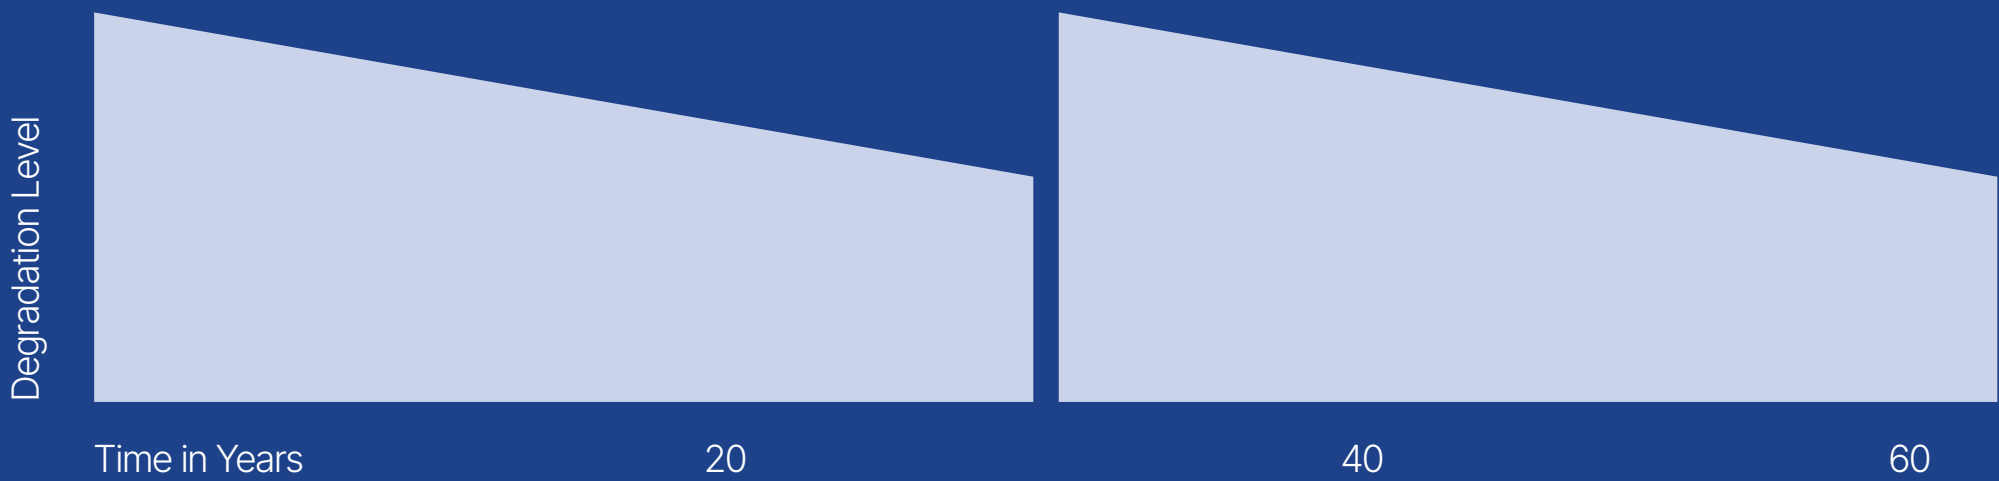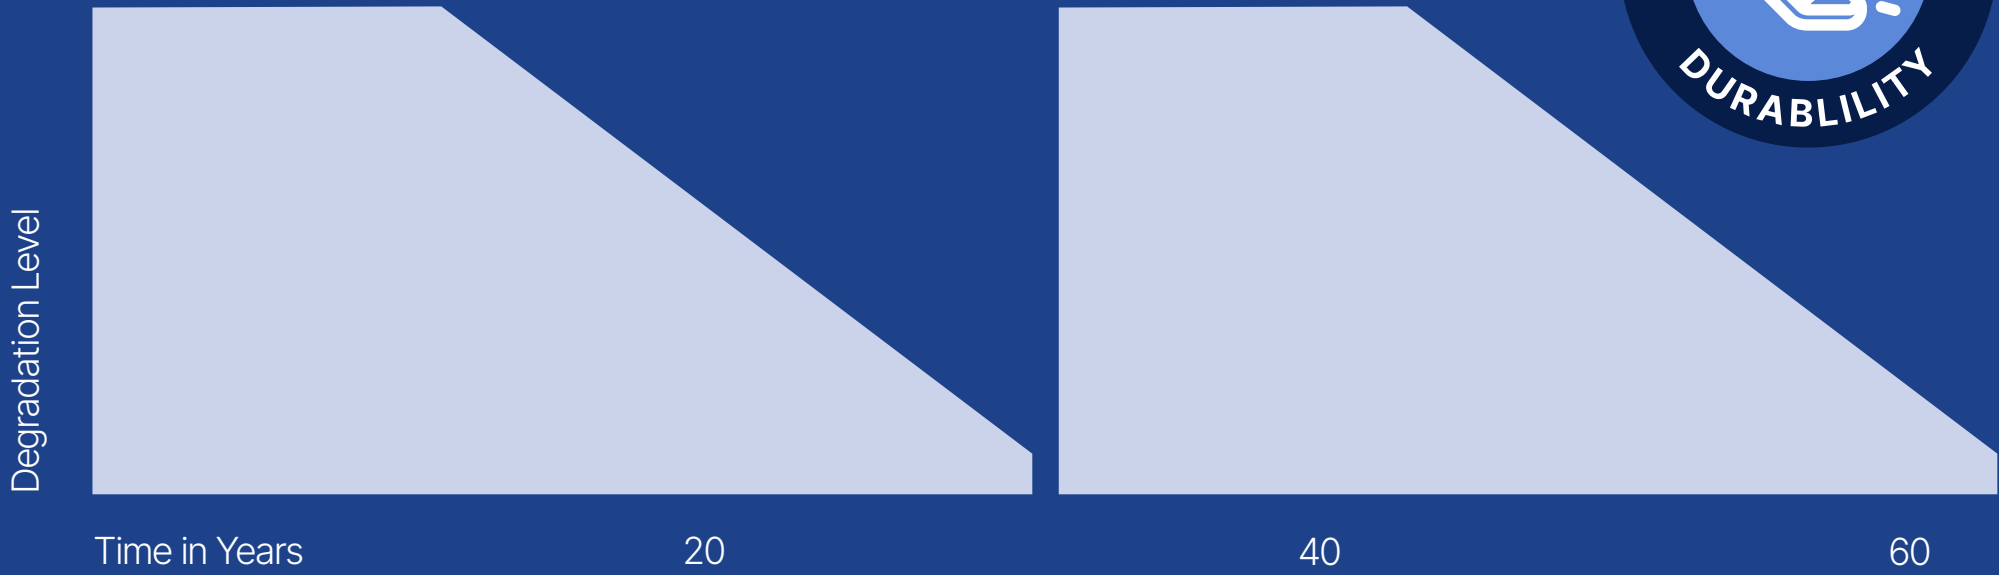

For light scuffs, scratches and general wear on our Timber Solutions, it is possible to lightly scuff and recoat the top wear layer an almost unlimited amount of times.

When it comes to heavier damage, the amount of times you can recoat the product depends on the level of damage and the thickness of the veneer.

Our Timber Solutions come in 2mm, 3mm and 6mm veneer depths (plus 14mm for Bamboo). As a guide, you could thoroughly sand and recoat a 2mm veneer once, a 3mm veneer twice, and a 6mm veneer four times.

A full sand back to the raw timber will also present the opportunity to change the colour of the stain and the texture of the finish.

